HP-41CV Quick Reference Guide

Contents

The HP-41CV Keyboards	
Normal	2
User	4
Alpha	6
How to Execute Functions	8
Function Set	8
Display Features	16
Organization of Memory	17
Storing and Executing Programs	18
The Catalogs	19
The Flags and Their Status	20
List of Errors	21

The Normal Keyboard



- 1. Primary Function.
- 2. Alternate Function.
- 3. Shift Key. Press first to carry out an alternate function.
- 4. Toggle Keys.
- 5. CLX/A Clear X or Clear Alpha. Clears the entire register.
- 6. Back Arrow. Backspaces and erases one character at a time (if entry has not been terminated).
- 7. XEQ Execute.

Used to execute functions and programs not assigned to keys. See page 8 in this guide.

The User Keyboard



1. USER User.

Activates and deactivates the User keyboard.

2. Assigning a Function or Global Label to a Key.

- 1. Press ASN.
- 2. Press ALPHA.
- 3. Enter the function name or global label.
- 4. Press ALPHA.
- 5. Press the key to which you want the function assigned. (To restore a key to its Normal function, skip step 3.)

3. Executing a User Function.

- 1. Make sure the User keyboard is active.
- 2. Press the redefined key.

Any key *not* redefined retains its Normal function (except in the top two rows).

4. Local Label Searching.

If a key in the top two rows (or shifted top row) is not reassigned, the HP-41CV will perform local label searching if one of those keys is pressed when the User keyboard is active. If a matching local label (A through J or a through e) is found in the current program, execution of the program starts there. If that label is not found in the current program, the Normal function of that key is executed.

The Alpha Keyboard



- 1. Primary Function.
- 2. Alternate Function.
- 3. Shift Key. Press first to carry out an alternate function.
- 4. 🕞 Append.

Press \vdash first to have the following Alpha entry be appended to (rather than overwrite) the previous Alpha entry.

- 5. [ALPHA] Alpha. Activates and deactivates the Alpha keyboard.
- 6. ASTO Store From Alpha. Stores the leftmost six characters of the Alpha register into the specified register.
- 7. ARCL Recall Into Alpha. Recalls the contents of the specified register and appends them to the Alpha register.
- 8. **CLA** Clear Alpha Register.
- 9.
 Back Arrow.

Backspaces and erases one character at a time (if entry has not been terminated).

10. AVIEW View Alpha Register.

Used primarily as a program instruction to display the Alpha register during a running program.

How to Execute Functions (Alpha Execution)

If a function has its own key (whether on the Normal keyboard or the User keyboard), you can perform its operation by pressing that key—such as for 1/x—or by pressing the shift key and then that key—such as for x^2 . (Remember to supply any necessary numbers or labels first.)

If a function does not appear on the keyboard—such as $\boxed{\text{COPY}}$ —you can perform it using either Alpha execution or a User-defined key on the User keyboard. How to assign functions to User keys is shown on page 5 of this guide. Alpha execution is shown below:

- 1. Press XEQ.
- 2. Press ALPHA to activate the Alpha keyboard.
- 3. Spell out the Alpha name of the desired function, or the global label of the desired program.
- 4. Press <u>ALPHA</u> to deactivate the Alpha keyboard and end the procedure.

If the function needs a parameter, it will cue for it with the $_$ input cue.

Function Set

This is an alphabetical list of the HP-41CV functions, including brief definitions. For page references to the complete descriptions within the owner's manual, refer to the Function Index in the owner's manual.

Note that usually you supply any needed operands *before* you execute the function (the operator). The exceptions are the *parameter functions*, which cue you for information *after* you execute the function. Parameter functions are shown below with their parameters, such as <u>ARCL</u> *nn*.

Function names printed in blue are *Alpha names* and use Alpha execution or User-keyboard execution. Function names printed in black or gold are *keyboard names*, and have keys for execution on the Normal keyboard.

Function

Definition

]	Back arrow. Deletion.
]	Append to Alpha register.
(+)	Plus.
(_)	Minus.
(X)	Multiplied by.
(÷)	Divided by.
(1/x)	Reciprocal.
▶ ★X (10 ^x)	Common exponential.
3S	Absolute value.
COS (COS ⁻¹)	Arc cosine.
V	Advance printer paper.
PHA	Alpha keyboard toggle.
DFF	Alpha keyboard off.
NC	Alpha keyboard on.
RCL nn (ARCL nn)	Alpha recall. Append reg. nn to Alpha reg.
SHF	<i>Alpha shift</i> six characters to the left.
SIN (SIN-1)	Arc sine.
Nname, key	Assign function or label to User key.
STO]nn ([ASTO]nn)	Alpha store. Copy first six characters from Alpha reg. into reg. nn.
TAN (TAN-1)	Arc tangent.
VIEW (AVIEW)	Alpha view.
STOINN (ASTOINN) TANI (TAN'T)) VIEWI (AVIEWI)	Alpha store. Copy first six characters from Alpha reg. int reg. nn. Arc tangent. Alpha view.

Definition

BEEP (BEEP)	Beeper.
BST (BST)	<i>Back step</i> through program lines.
CAT n (CATALOG n)	List catalog n (1 to 3).
CFnn (CFnn)	Clear flag nn (00 to 29).
CHS (CHS)	Change sign.
CLA (CLA)	Clear Alpha.
CLD	Clear display of message.
CLP label	<i>Clear program</i> specified by global label.
CLRG	Clear all data registers.
	<i>Clear summations</i> . Clear statis- tics regs.
CLST	Clear stack.
CLX (CLx)	<i>Clear X</i> -register (the usual display).
COPY	Copy ROM program specified by global label.
COS (COS)	Cosine.
D-R	Degrees to radians conversion.
DEC	<i>Decimal.</i> Octal to decimal conversion.
DEG	Degrees mode set.
DEL	<i>Delete nnn</i> program lines, incl. current line.
DSE nn	Decrement and skip if less than or equal. Given iiiii.fffcc in R_{nn} , decrement iiiii by cc and skip next line if iiiii is now $\leq fff$.
EEX	Enter exponent.
END	End of program.
ENG n (ENG n)	Engineering display. Use $n+1$ digits and powers of 10^{3n} .

Definition

ENTER (ENTER +)	Separate sequential numbers.
	Natural exponential.
EtX-1	For arguments close to zero.
FACT	Factorial.
FC? nn	Flag nn clear? If not, skip next line.
FC?C nn	Flag nn clear? If not, skip next line. Clear flag nn.
FIX n (FIX n)	Fixed-point display with n decimal places.
FRC	Fractional part.
FS?nn (FS?nn)	Flag nn set? If not, skip next line.
FS?C)nn	Flag nn set? If not, skip next line. Clear flag nn.
I GRAD I	Set Grads mode.
GTO label (GTO label)	Go to. Program branch to given label.
GTO Jabel (GTO Jabel) GTO • nnn	Go to. Program branch to given label. Go to (dot). Move current line to line nnn or global label.
GTO label (GTO label) GTO I nnn GTO I I	Go to. Program branch to given label. Go to (dot). Move current line to line nnn or global label. Go to (dot dot). Move current line to end of program memory and pack memory.
GTO Jabel (GTO Jabel) GTO • nnn GTO • •	Go to. Program branch to given label. Go to (dot). Move current line to line nnn or global label. Go to (dot dot). Move current line to end of program memory and pack memory. To hours-minutes-seconds. Convert from decimal hours.
GTO label (GTO label) GTO • nnn GTO • • HMS	Go to. Program branch to given label. Go to (dot). Move current line to line nnn or global label. Go to (dot dot). Move current line to end of program memory and pack memory. To hours-minutes-seconds. Convert from decimal hours. Hours-minutes-seconds plus. Add degrees or times.
GTO label (GTO label) GTO • nnn GTO • • HMS HMS+	Go to. Program branch to given label. Go to (dot). Move current line to line nnn or global label. Go to (dot dot). Move current line to end of program memory and pack memory. To hours-minutes-seconds. Convert from decimal hours. Hours-minutes-seconds plus. Add degrees or times. Hours-minutes-seconds minus. Subtract degrees or times.
GTO label (GTO label) GTO • nnn GTO • • HMS HMS+ HMS-	Go to. Program branch to given label. Go to (dot). Move current line to line nnn or global label. Go to (dot dot). Move current line to end of program memory and pack memory. To hours-minutes-seconds. Convert from decimal hours. Hours-minutes-seconds plus. Add degrees or times. Hours-minutes-seconds minus. Subtract degrees or times. To decimal hours. Convert from HMS.

Function	Def
ISG)nn (ISG)nn)	Increment and Given iiiii.fffcc increment iiiii next line if iiii
LASTX (LASTx)	Recall number reg.
LBL label	Label.
(LBL label)	
LN (LN)	Natural log.
LN1+X	For arguments
LOG (LOG)	Common log.
MEAN	Means of accu y-values.
MOD	$y \mod x$.
OCT	Octal. Decimal conversion.
OFF	Turn off comp
ON	Continuous on. matic turn-off.
ON	On/off toggle.
[P-R] ([P+R])	Polar to rectant Enter θ , then reg., y in Y-reg
PACK	Pack program
% (%)	x percent of y.
%CH	Percent change
ΡΙ (π)	Value of π to a places.
PRGM	Program mode
PROMPT	Display the me reg. and stop p input).
PSE	Pause. Interrug

inition

skip if greater. in R_{nn}, by cc and skip ii is now > fff. from LAST X

close to 1.

mulated x- and

to octal

uter.

. (Cancels auto-.)

gular conversion. r. Returns x in Xg.

memory.

e from y to x.

nine decimal

toggle.

essage in Alpha program (allowing

pt program for a

Function	Definition
Rt	Roll up stack.
R-D	Radians to degrees conversion.
R-P (Rectangular to polar conversion. Enter y, then x. Returns r in X-reg., θ in Y-reg.
R/S	Run/stop program.
RAD	Radians mode.
RCL nn (RCL nn)	Recall (copy) value from R_{nn} .
	Roll down stack.
RND	Round.
RTN (RTN)	<i>Return</i> program flow from sub- routine to main program.
scin (scin)	Scientific notation with n decimal places.
SDEV	Standard deviations of accu- mulated x- and y-values.
SF)nn (SF)nn)	Set flag nn (00 to 29).
Σ+ (Σ+)	Summation plus. Add data val- ue(s) to statistical accumulation.
Σ- (Σ-)	Summation minus. Delete data value(s) from statistical accumulation.
DREG nn	Statistics registers set to Rnn through Rnn+5.
SIGN	1 or -1 for numbers, 0 for non-numbers, $+1$ for zero.
SIN (SIN)	Sine.
SIZE	Allocates <i>nnn</i> regs. to data storage.
SQRT (II)	Square root.
SST (SST)	<i>Single step</i> to next program line.

Definition

ST+ nn (STO + nn) ST-nn (STO - nn) ST* nn (STO × nn) ST/ nn (STO + nn) STO nn (STO nn) STOP (R/S) TAN (TAN) TONE **n** USER VIEW nn (VIEW nn) $X \uparrow 2$ (x^2) $X = 0? \quad (x = 0?)$ X ≠ 0? X < 0? X < = 0? X > 0? $X = Y? \quad (x = y?)$ [X ≠ Y?] X < Y? $[X < = Y?] ([x \le y?])$ X > Y? (x > y?)X <> nnX <> Y ($x \ge y$)

Store plus. $R_{nn} + x$; result in R_{nn} . Store minus. $R_{nn} - x$; result in R_{nn} . Store multiply. $R_{nn} \times x$; result in R_{nn} . Store divide. $R_{nn} \div x$; result in R_{nn} . Store copy of x in R_{nn} . Stop a running program. Tangent. $0 \le n \le 9$. User keyboard toggle. Display contents of R_{nn} . Square.

Conditional. If not true, skips next program line.

X exchange with R_{nn} contents. X exchange Y contents.

Definition

XEQ name	
(XEQ name)	
$Y \uparrow X (y^{x})$	

Execute given function or label. y to the x power (enter y, then x).

Display Features



- 1. Display Annunciators.
- 2. Low-Power Condition.
- 3. User Keyboard Active.
- 4. Current Angular Mode.
- 5. Digit Separator and Radix Mark: Flag 28 set. CF 28 reverses them. CF 29 removes the digit separator.
- 6. Shift Set. (To cancel, press again.)
- 7. Flag(s) Set (flags 00 through 04).
- 8. Input Cue.
- 9. Program Mode or program running.
- 10. Alpha Keyboard Active.

The display message **MEMORY LOST** indicates that Continuous Memory has been cleared and reset.

The program execution indicator, \succ , appears and moves each time the program encounters a label.

Organization of Memory

Data Storage Registers



The number of uncommitted registers still available for use is displayed at the end of catalog 1 and after pressing <u>GTO</u>. in Program mode.

Whenever Continuous Memory is cleared, R_{00} through $R_{(272)}$ are allocated to data storage. This distribution of registers in main memory exists until you change it by executing <u>SIZE</u> nnn (where nnn is the number of registers to be in data storage).

Storing and Executing Programs

To store a program in main memory:

- 1. Press **PRGM** to activate Program mode.
- 2. Press GTO . to pack memory and move to the end of program memory.
- 3. Key in a global label of up to seven Alpha characters.
- 4. Key in each subsequent instruction.
- 5. Optional: press GTO... to automatically add an END instruction and pack program memory.
- 6. Press **PRGM** to activate Execution mode.

If you make any mistakes, use \bullet to delete individual characters and entire lines.

To execute a program in main memory:

- 1. Make sure Execution mode is active (no **PRGM** annunciator).
- 2. Start the program by executing its global label—by Alpha execution (page 8) or by User key (page 5 in this guide). Program execution *starts* at that global label.

While the program is actually running, the **PRGM** annunciator is on. The \succ program execution indicator also appears.

Pressing $\boxed{R/S}$ will either start the current program (from its current line) or stop a running program. If a running program stops to prompt for data, for example, you key in the data and then press $\boxed{R/S}$ to continue the program.

To run (and re-run) the current program, you can simply press $\boxed{RTN}[R/S]$.

The Catalogs

There are three catalogs (press CATALOG n) in the HP-41CV:

- Catalog 1: User Programs. A list of all global labels and END instructions, listed in the order in which they were stored. The permanent END (.END.) shows the number of unused registers in uncommitted memory (and therefore still available for programming).
- Catalog 2: External Functions. A list of all functions and programs currently available to the computer from peripheral devices, and plug-in modules. The list of functions is grouped by source.
- Catalog 3: Standard Functions. An alphabetical list of the standard functions.

When you execute CATALOG n, the catalog listing begins. You can stop and restart it with $\boxed{R/S}$. With the automatic listing stopped, you can step through it forwards with \boxed{SST} and backwards with \boxed{BST} , or exit the catalog with $\textcircled{\bullet}$.

Most automatic catalog listings speed up when you press an undefined key. If a printer is attached, the catalogs will print out in Trace mode only.

The Flags and Their Status

0 = clear. ? = depends on other conditions.

1 =	set.	M =	maintained	by	Continuous	Memory.
-----	------	-----	------------	----	------------	---------

Flag Number	Flag Name	Status at Reset, Turn-On
00–10	User Flags You can test and alter th	0, M
11.20		coc nago.
11-29	You can test and alter the	ese flags.
11	Automatic Execution	0 0
12-20	External Device Control	0,0
21	Printer Enable	2 2
22	Numeric Data Input	0.0
23	Alpha Data Input	0,0
24	Range-Error Ignore	0.0
25	Error Ignore	0, 0
26	Audio Enable	1, 1
27	User Keyboard	0, M
28	Radix Mark	1, M
29	Digit Separator Mark	1, M
30-55	System Flags	
	You can test but not alter	these flags.
31	Date Format	0, M
36	Number of Digits	0, M
37	"	1, M
38	"	0, M
39	"	0, M
40	Display Format	1, M
41	"	0, M
42	Grads Mode	0, M
43	Radians Mode	0, M
44	Continuous On	0, 0
48	Alpha Keyboard	0, 0
49	Low Power	?, ?
50	Message	0, 0
55	Printer Existence	?, ?

List of Errors

Following is a short description of each error message. The function that caused an error does not get executed. You can clear an error message by pressing \bullet .

Error	Meaning
ALPHA DATA	Nonnumeric data used.
DATA ERROR	Illegal operand.
MEMORY LOST	Continuous Memory has been cleared and reset.
NONEXISTENT	The register, label, or function specified does not exist.
OUT OF RANGE	Number too large.
PRIVATE	Program on card or cassette is private.
RAM	The global label specified already exists in main memory.
ROM	You cannot modify a program in ROM.



Portable Computer Division 1000 N.E. Circle Blvd., Corvallis, OR 97330, U.S.A.

European Headquarters 150, Route Du Nant-D'Avril P.O. Box, CH-1217 Meyrin 2 Geneva-Switzerland HP-United Kingdom (Pinewood) GB-Nine Mile Ride, Wokingham Berkshire RG11 3LL

00041-90536 English

Printed in Singapore 5/84