

HP 82701A

Security Cradle Instructions

The HP 82701A Security Cradle is a lockable holder for the HP-75 Portable Computer, which, when secured to a fixed object (such as a desk), prevents the computer from being removed. It also prevents the removal of plug-in modules, the plug-in 8K memory module, and the battery pack from the HP-75. However, the cradle allows full access to the HP-75 keyboard, the card reader, the HP-IL receptacles, and the ac adapter/recharger receptacle.

The HP 82701A Security Cradle is packaged with the following parts:

- 1 security cradle.
- 1 five-foot cable.
- 1 padlock and key.
- 4 mounting screws.
- 2 adhesive mounting strips.

Installing the Security Cradle

The HP 82701A Security Cradle can be attached to a wood surface with the four mounting screws, or secured to an object with the five-foot cable. When using the cable, you can mount the cradle on flat surface with the adhesive mounting strips.

To mount the cradle on a wood surface:

1. Place the cradle on the surface and mark the position of each screw hole with a pencil.
2. Drill a pilot hole at each mark. (Use a 1/8 inch or 3 mm bit.)
3. Using the pilot holes, secure the cradle to the surface with the four screws. (See Figure 1.)
4. Install the HP-75 in the cradle as described below (the cable won't be needed).

To secure the cradle with the cable:

1. Loop the cable around a post or some other fixed object. (See Figure 2.)
2. If you want the cradle to be stationary, you can mount it on a clean surface with the two adhesive strips.
3. Install the HP-75 in the cradle as described below.

Installing the HP-75 in the Security Cradle

To install the HP-75 in the cradle:

1. Position the cradle so that its front lip is toward you.
2. Set the HP-75 behind the cradle and slide the front end (with the module ports) into it. While holding the cradle with one hand, push the HP-75 into the cradle from the back until its front edge meets the cradle's front lip. (See Figure 3.)
3. Pass the shackle of the padlock through the free end of the cable.
4. Pass the shackle through one of the lock holes at either side of the cradle and lock it. (See Figure 4.) The shackle prevents the HP-75 from being withdrawn from the cradle.


Removing the HP-75 From the Security Cradle

To remove the HP-75 from the cradle:


1. Unlock and remove the padlock from the cradle.
2. Hold the cradle with one hand and push the HP-75 out of the cradle with the other hand.

Additional Information


If you send your security cradle to a Hewlett-Packard service center, you should include a key to the padlock. (You have the only keys.) Also, you should not send the HP-75 installed in the security cradle.

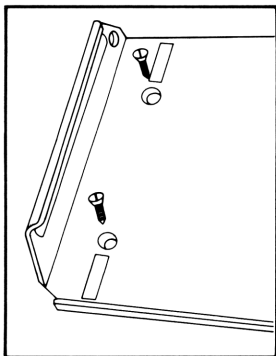


1

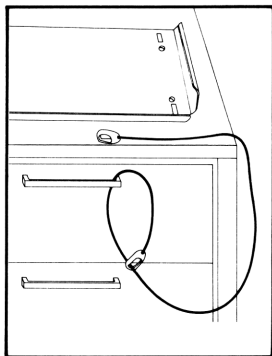

2

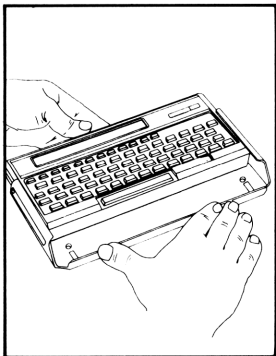

3

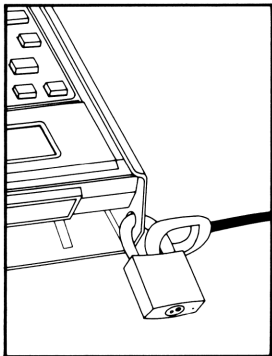 

4



Corvallis Division
1000 N.E. Circle Blvd., Corvallis, OR 97330, U.S.A.

© Hewlett-Packard Company 1982

82701-90001

Printed in U.S.A. 8/82