

You can convert numbers from metric to imperial units and vice versa. See [Example 33](#). The procedure is:

1. Enter the number you want to convert.
2. Press [2nd] [CONV] to display the units menu. There are 7 menus, covering distance, area, temperature, capacity, weight, energy, and pressure.
3. Press [▲] or [▼] to scroll through the list of units until the appropriate units menu is shown, then press [ENTER].
4. Press [◀] or [▶] to convert the number to the highlighted unit.

Physics Constants

You can use the following physics constants in your calculations:

Symbol	Meaning	Value
c	Speed of light	299792458 m/s
g	Acceleration of gravity	9.80665 m/s ²
G	Gravitational constant	6.6725985 × 10 ⁻¹¹ N·m ² ·kg ⁻²
Vm	Molar volume of ideal gas	0.0224141 m ³ ·mol ⁻¹
NA	Avogadro's number	6.022136736 × 10 ²³ mol ⁻¹
e	Elementary charge	1.602177335 × 10 ⁻¹⁹ C
m ^e	Electron mass	9.109389754 × 10 ⁻³¹ kg
m ^p	Proton mass	1.67262311 × 10 ⁻²⁷ kg
h	Planck's constant	6.62607554 × 10 ⁻³⁴ J·s
k	Boltzmann's constant	1.38065812 × 10 ⁻²³ J·K ⁻¹
IR	Gas constant	8.3145107 J / mol · K
IF	Faraday constant	96485.30929 C / mol
mn	Neutron constant	1.67492861 × 10 ⁻²⁷ kg
μ	Atomic mass constant	1.66054021 × 10 ⁻²⁷ kg
ε ₀	Dielectric permittivity	8.854187818 × 10 ⁻¹² F / m
μ ₀	Magnetic permittivity	0.00001257 H / m
φ ₀	Flux quantum	2.067834616 × 10 ⁻¹⁵ Vs
a ₀	Bohr radius	5.291772492 × 10 ⁻¹¹ m
μ _B	Bohr magneton	9.274015431 × 10 ⁻²⁴ A · m ²
μ _N	Neutron magnetic moment	5.050786617 × 10 ⁻²⁷ J / T

To insert a constant:

1. Position your cursor where you want the constant inserted.
2. Press [2nd] [CONST] to display the physics constants menu.
3. Scroll through the menu until the constant you want is underlined.
4. Press [ENTER]. (See [Example 34](#).)

Multi-statement functions

Multi-statement functions are formed by connecting a number of individual statements for sequential execution. You can use multi-statements in manual calculations and in the program calculations.

When execution reaches the end of a statement that is followed by the display result command symbol (▲), execution stops and the result up to that point appears on the display. You can resume execution by pressing [ENTER]. See [Example 35](#).

Graphs


Built-in Function Graphs

You can produce graphs of the following functions: sin, cos, tan, sin⁻¹, cos⁻¹, tan⁻¹, sinh, cosh, tanh, sinh⁻¹, cosh⁻¹, tanh⁻¹, √, √, x², x³, log, ln, 10^x, e^x, x⁻¹.

When you generate a built-in graph, any previously generated graph is cleared. The display range is automatically set to the optimum. See [Example 36](#).

User-generated Graphs

You can also specify your own single-variable functions to graph (for example, y = x³ + 3x² - 6x - 8). Unlike built-in functions (see above), you must set the display range when creating a user generated graph.

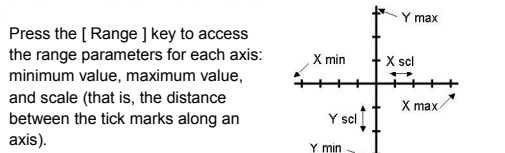



Press the [Range] key to access the range parameters for each axis: minimum value, maximum value, and scale (that is, the distance between the tick marks along an axis).

After setting the range, press [Graph] and enter the expression to be graphed. See [Example 37](#).

Graph ↔ Text Display and Clearing a Graph

Press [G↔T] to switch between graph display and text display and vice versa.

To clear the graph, please press [2nd] [CLS].



Zoom Function

The zoom function lets you enlarge or reduce the graph. Press [2nd] [Zoom x f] to specify the factor for enlarging the graph, or press [2nd] [Zoom x f] to specify the factor for reducing the graph. To return the graph to its original size, press [2nd] [Zoom Org]. See [Example 37](#).

Superimposing Graphs

- A graph can be superimposed over one or more graphs. This makes it easy to determine intersection points and solutions that satisfy all the corresponding expressions. See [Example 38](#).
- Be sure to input variable X in the expression for the graph you want to superimpose over a built-in graph. If variable X is not included in the second expression, the first graph is cleared before the second graph is generated. See [Example 39](#).

Trace Function

This function lets you move a pointer around a graph by pressing [▶] and [◀]. The x- and y-coordinates of the current pointer location are displayed on the screen. This function is useful for determining the intersection of superimposed graphs (by pressing [2nd] [X↔Y]). See [Example 40](#).

Note: Due to the limited resolution of the display, the position of the pointer may be an approximation.

Scrolling Graphs

After generating a graph, you can scroll it on the display. Press [▲] [▼] [◀] [▶] to scroll the graph left, right, up or down respectively. See [Example 41](#).

Plot and Line Function

The plot function is used to mark a point on the screen of a graph display. The point can be moved left, right, up, or down using the cursor keys. The coordinates of the point are displayed.

When the pointer is at the desired location, press [2nd] [PLOT] to plot a point. The point blinks at the plotted location.

Two points can be connected by a straight line by pressing [2nd] [LINE]. See [Example 42](#).

Statistical Calculations

The statistics menu has four options: **1-VAR** (for analyzing data in a single dataset), **2-VAR** (for analyzing paired data from two datasets), **REG** (for performing regression calculations), and **D-CL** (for clearing all datasets).

Single-Variable and Two-Variable Statistics

1. From the statistics menu, choose **1-VAR** or **2-VAR** and press [ENTER].
2. Press [DATA], select **DATA-INPUT** from the menu and press [ENTER].
3. Enter an x value and press [▼].
4. Enter the frequency (**FREQ**) of the x value (in **1-VAR** mode) or the corresponding y value (in **2-VAR** mode) and press [▼].
5. To enter more data, repeat from step 3.
6. Press [2nd] [STATVAR].
7. Press [▲] [▼] [◀] or [▶] to scroll through the statistical variables until you reach the variable you are interested in (see table below).

Variable	Meaning
n	Number of x values or x-y pairs entered.
\bar{x} or \bar{y}	Mean of the x values or y values.
Xmax or Ymax	Maximum of the x values or y values.
Xmin or Ymin	Minimum of the x values or y values.
Sx or Sy	Sample standard deviation of the x values or y values.
σx or σy	Population standard deviation of the x values or y values.
Σx or Σy	Sum of all x values or y values.
Σx ² or Σy ²	Sum of all x ² values or y ² values.
Σxy	Sum of (x × y) for all x-y pairs.
CV x or CV y	Coefficient of variation for all x values or y values.
R x or R y	Range of the x values or y values.

8. To draw 1-VAR statistical graphs, press [Graph] on the STATVAR menu. There are three types of graph in 1-VAR mode: **N-DIST** (Normal distribution), **HIST** (Histogram), **SPC** (Statistical Process Control). Select the desired graph type and press [ENTER]. If you do not set display ranges, the graph will be produced with optimum ranges. To draw a scatter graph based on 2-VAR datasets, press [Graph] on the STATVAR menu.
9. To return to the STATVAR menu, press [2nd] [STATVAR].

Process Capability

(See [Examples 43 and 44](#).)

1. Press [DATA], select **LIMIT** from the menu and press [ENTER].
2. Enter a lower spec. limit value (**X LSL** or **Y LSL**), then press [▼].
3. Enter an upper spec. limit value (**X USL** or **Y USL**), then press [ENTER].
4. Select **DATA-INPUT** mode and enter the datasets.
5. Press [2nd] [STATVAR] and press [▲] [▼] [◀] [▶] to scroll through the statistical results until you find the process capability variable you are interested in (see table below).

Variable	Meaning
Cax or Cay	Capability accuracy of the x values or y values $C_{ax} = \frac{\left(\frac{X_{USL} + X_{LSL}}{2} - \bar{x} \right)}{\frac{X_{USL} - X_{LSL}}{2}}, \quad C_{ay} = \frac{\left(\frac{Y_{USL} + Y_{LSL}}{2} - \bar{y} \right)}{\frac{Y_{USL} - Y_{LSL}}{2}}$
Cpx or Cpy	Potential capability precision of the x values or y values $C_{px} = \frac{X_{USL} - X_{LSL}}{6\sigma}, \quad C_{py} = \frac{Y_{USL} - Y_{LSL}}{6\sigma}$
Cpkx or Cpk y	Minimum (CPU, CPL) of the x values or y values, where CPU is the upper spec. limit of capability precision and CPL is lower spec. limit of capability precision. $C_{pkx} = \min(C_{PUX}, C_{PLX}) = C_{px}(1 - C_{ax})$ $C_{pk y} = \min(C_{PUY}, C_{PLY}) = C_{py}(1 - C_{ay})$
ppm	Parts per million, Defection Per Million Opportunities.

Note: When calculating process capability in **2-VAR** mode, the x_n and y_n values are independent of each other.

Correcting Statistical Data

See [Example 45](#).

1. Press [DATA].
2. To change the data, select **DATA-INPUT**. To change the upper or lower spec. limit, select **LIMIT**. To change ax, select **DISTR**.
3. Press [▼] to scroll through the data until the entry you want to change is displayed.
4. Enter the new data. The new data you enter overwrites the old entry.
5. Press [▼] or [ENTER] to save the change.

Note: The statistical data you enter is retained when you exit statistics mode. To clear the data, select **D-CL** mode.

Probability Distribution (1-Var Data)

See [Example 46](#).

1. Press [DATA], select **DISTR** and press [ENTER].
2. Enter a a_x value, then press [ENTER].
3. Press [2nd] [STATVAR].
4. Press [◀] or [▶] to scroll through the statistical results until you find the probability distribution variables you want (see table below).

Variable	Meaning
t	Test value $t = \frac{a_x - \bar{x}}{\sigma}$
P(t)	The cumulative fraction of the standard normal distribution that is less than t.
R(t)	The cumulative fraction of the standard normal distribution that lies between t and 0. R(t) = 1 - t.
Q(t)	The cumulative fraction of the standard normal distribution that is greater than t. Q(t) = 0.5 - t .

Regression Calculation

There are six regression options on the REG menu:

LIN	Linear Regression	y = a + b x
LOG	Logarithmic Regression	y = a + b ln x
e ^	Exponential Regression	y = a · e ^{b x}
PWR	Power Regression	y = a · x ^b
INV	Inverse Regression	y = a + $\frac{b}{x}$
QUAD	Quadratic Regression	y = a + b x + c x ²

See [Example 47-48](#).

1. Select a regression option on the REG menu and press [ENTER].
2. Press [DATA], select **DATA-INPUT** from the menu and press [ENTER].
3. Enter an x value and press [▼].
4. Enter the corresponding y value and press [▼].
5. To enter more data, repeat from step 3.
6. Press [2nd] [STATVAR].
7. Press [◀] [▶] to scroll through the results until you find the regression variables you are interested in (see table below).
8. To predict a value for x (or y) given a value for y (or x), select the x' (or y') variable, press [ENTER], enter the given value, and press [ENTER] again.

Variable	Meaning
a	Y-intercept of the regression equation.
b	Slope of the regression equation.
r	Correlation coefficient.
c	Quadratic regression coefficient.
x'	Predicted x value given a, b, and y values.
y'	Predicted y value given a, b, and x values.

9. To draw the regression graph, press [Graph] on the STATVAR menu. To return to the STATVAR menu, press [2nd] [STATVAR].

BaseN Calculations

You can enter numbers in base 2, base 8, base 10 or base 16. To set the number base, press [2nd] [dhbo], select an option from the menu and press [ENTER]. An indicator shows the base you selected: **d**, **h**, **b**, or **o**. (The default setting is d: decimal base). See [Example 49](#).

The allowable digits in each base are:

- Binary base (b): 0, 1
 - Octal base (o): 0, 1, 2, 3, 4, 5, 6, 7
 - Decimal base (d): 0, 1, 2, 3, 4, 5, 6, 7, 8, 9
 - Hexadecimal base (h): 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, *IA, IB, IC, ID, IE, IF*
- Note: To enter a number in a base other than the set base, append the corresponding designator (**d**, **h**, **b**, **o**) to the number (as in **h3**).

Press [☞] to use the block function, which displays a result in octal or binary base if it exceeds 8 digits. Up to 4 blocks can be displayed. See [Example 50](#).

Negative Expressions

In binary, octal, and hexadecimal bases, negative numbers are expressed as complements. The complement is the result of subtracting that number from 10000000000 in that number's base. You do this by pressing [NEG] in a non-decimal base. See [Example 51](#).

Basic Arithmetic Operations for Bases


You can add, subtract, multiply, and divide binary, octal, and hexadecimal numbers. See [Example 52](#).

Logical Operation


The following logical operations are available: logical products (AND), negative logical (NAND), logical sums (OR), exclusive logical sums (XOR), negation (NOT), and negation of exclusive logical sums (XNOR). See [Example 53](#).

Programming

The options on the program menu are: **NEW** (for creating a new program), **RUN** (for executing a program), **EDIT** (for editing a program), **DEL** (for deleting a program), **TRACE** (for tracing a program), and **EXIT** (for exiting program mode).



Before Using the Program Area

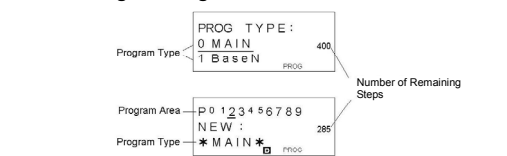

Number of Remaining Steps: The program capacity is 400 steps. The number of steps indicates the amount of storage space available for programs, and it will decrease as programs are input. The number of remaining steps will also decrease when steps are converted to memories. See [Array Variables](#) above.

Program Type: You must specify in each program the calculation mode that the calculator should enter when executing the program. To perform binary, octal or hexadecimal calculations or conversions, choose **BaseN**; otherwise choose **MAIN**.

Program Area: There are 10 program areas for storing programs (P0-P9). If an area has a program stored in it, its number is displayed as a subscript (as in P₁).

Program Control Instructions

The calculator's programming language is similar to many programming languages, such as BASIC and C. You can access most of the programming commands from the program control instructions. You display these instructions by pressing [2nd] [INST].



Clear screen command

- CLS**
⇒ Clear the display on the screen.

Input and output commands

- INPUT memory variable**
⇒ Makes the program pause for data input. **memory variable =** appears on the display. Enter a value and press [ENTER]. The value is assigned to the specified variable, and the program resumes execution. To input more than one memory variable, separate them with a semicolon (;).
- PRINT " text ", memory variable**
⇒ Print the text specified inside the double quotation marks and the value of the specified memory variable.

Conditional branching

- IF (condition) THEN { statement }**
⇒ IF the condition is true, THEN statement is executed.
- IF (condition) THEN { statement }; ELSE { statement }**
⇒ IF the condition is true, the specified THEN statement is executed; otherwise the ELSE statement is executed.

Jump commands

- Lbl n**
⇒ An Lbl n command marks a destination point for a GOTO n jump command. Each label name (Lb1) must be unique (that is, not repeated in the same program area). The label suffix n must be an integer from 0 to 9.
- GOTO n**
⇒ When program execution encounters a GOTO n statement, execution jumps to Lbl n (where n is the same value as the n in the GOTO n statement).

Mainroutine and Subroutine

GOSUB PROG n ;
⇒ You can jump between program areas, so that the resulting execution is made up of code from different program areas. The program from which other program areas are jumped to is the mainroutine, and an area jumped to is a subroutine. To cause a jump to a subroutine, enter **PROG n** where n is the number of the destination program area.

Note: The **GOTO n** command does not allow jumps between program areas. A **GOTO n** command only jumps to the corresponding label (Lb1) within the same program area.

End

⇒ Each program needs an **END** command to mark the end of the program. This is displayed automatically when you create a new program.

Increment and decrement

Post-fixed: Memory variable ++ or Memory variable --
Pre-fixed: ++ Memory variable or -- Memory variable
⇒ A memory variable is decreased or increased by one. For standard memory variables, the ++ (Increment) and -- (Decrement) operators can be either post-fixed or pre-fixed. For array variables, the operators must be pre-fixed.

With pre-fixed operators, the memory variable is computed before the expression is evaluated; with post-fixed operators, the memory variable is computed after the expression is evaluated.

For loop

FOR (start condition; continue condition; re-evaluation) { statements }

⇒ A **FOR** loop is useful for repeating a set of similar actions while a specified counter is between certain values.

For example:

```
FOR ( A = 1 ; A ≤ 4 ; A ++ )
{ C = 3 × A ; PRINT " ANS = ", C }
END
⇒ Result : ANS = 3, ANS = 6, ANS = 9, ANS = 12
```

The processing in this example is:

1. **FOR A = 1:** This initializes the value of **A** to 1. Since **A = 1** is consistent with **A ≤ 4**, the statements are executed and **A** is incremented by 1.
2. Now **A = 2.** This is consistent with **A ≤ 4**, so the statements are executed and **A** is again incremented by 1. And so on.
3. When **A = 5**, it is no longer true that **A ≤ 4**, so statements are not executed. The program then moves on to the next block of code.

Sleep command

SLEEP (time)
⇒ A **SLEEP** command suspends program execution for a specified time (up to a maximum of 105 seconds). This is useful for displaying intermediate results before resuming execution.

Swap command

SWAP (memory variable A, memory variable B)
⇒ The **SWAP** command swaps the contents in two memory variables.

Relational Operators

The relational operators that can be used in **FOR** loops and conditional branching are:


- = (equal to), < (less than), > (greater than), ≠ (not equal to), ≤ (less than or equal to), ≥ (greater than or equal to).

Creating a New Program

1. Select **NEW** from the program menu and press [ENTER].
2. Select the calculation mode you want the program to run in and press [ENTER].
3. Select one of the ten program areas (**P0123456789**) and press [ENTER].
4. Enter your program's commands.
 - You can enter the calculator's regular functions as commands.
 - To enter a program control instruction, press [2nd] [INST] and make your selection.
 - To enter a space, press [ALPHA] [SPC].
5. A semicolon (;) indicates the end of a command. To enter more than one command on a command line, separate them with a semicolon. For example:
Line 1: **INPUT A ; C = 0.5 × A ; PRINT " C = ", C ; END**
You can also place each command or group of commands on a separate line, as follows. In this case, a trailing semicolon can be omitted.
Line 1: **INPUT A ; C = 0.5 × A**
Line 2: **PRINT " C = ", C ; END**

Executing a Program

1. When you finish entering or editing a program, press [CL/ESC] to return to the program menu, select **RUN** and press [ENTER]. (Or you can press [PROG] in **MAIN** mode.)
2. Select the relevant program area and press [ENTER] to begin executing the program.
3. To re-execute the program, press [ENTER] while the program's final result is on the display.
4. To abort the execution of a program, press [CL/ESC]. A message appears asking you to confirm that you want to stop the execution.



Press [▶] to move the cursor to Y and then press [ENTER].

Debugging a Program